

ANANDA

Help Manual

Dynamic Torque

The content of this information is subject to change without notice

1. Check whether the torque sensor and controller connector are plugged in properly, and replace the damaged part.
2. Replace torque sensor.
3. If the above items are in good conditions, replace the controller.