




Help Manual

Controller bus current

The content of this information is subject to change without notice

1. Check the motor phase harness and Hall harness for damage and short circuit.

①

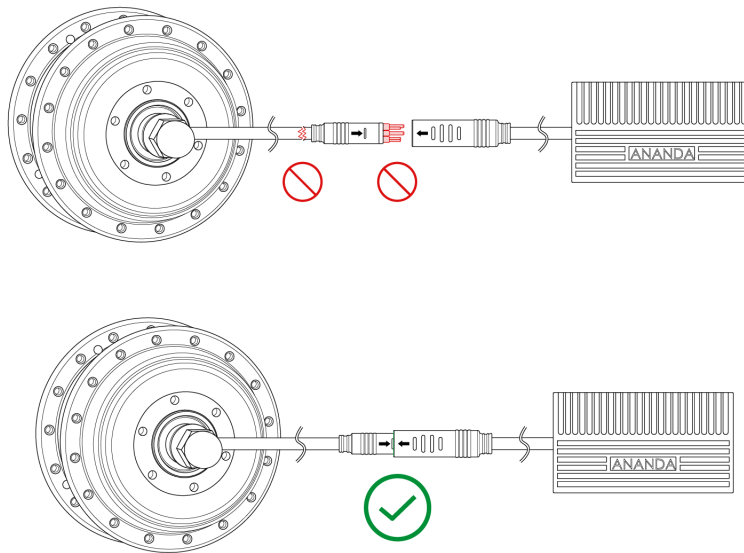

2. If the harness is connected correctly, replace the controller.
3. If the problem is not solved, replace the hubmotor.