



# Help Manual

## Motor Temperature

The content of this information is subject to change without notice

1. In case of any fault during operation under heavy load stop running and cool down the midmotor before normal operation.
2. Replace the midmotor.