

The logo for ANANDA, featuring the word "ANANDA" in a bold, italicized, green sans-serif font.

Help Manual

Communication failure

The content of this information is subject to change without notice

1. Check whether the display harness and the midmotor connector are plugged in properly.
2. Check whether the display harness is damaged or crushed.
3. Replace the display.
4. If the problem is not solved, replace the midmotor.